


ALR-H450 Handheld RFID reader allows firmware upgradeability via a downloadable firmware installer APK from either of the two locations:

www.alientechnology.com/readers/alr-h450/

or

<ftp://ftp.alientechnology.com/pub/handheld/alrh450/firmware/>


To check current firmware revision of H450, launch the Alien Demo application and access the RFID Settings screen from the top-right hand corner of the home page:

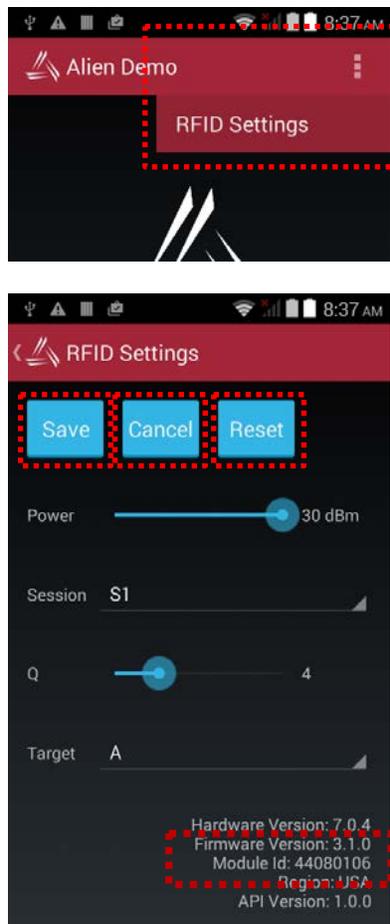


This will display current firmware revision at bottom right-hand side of screen.



To update firmware, download the firmware installation APK and place onto H450 (choose a file location that can be accessed from the Handheld file browser) and install the APK.

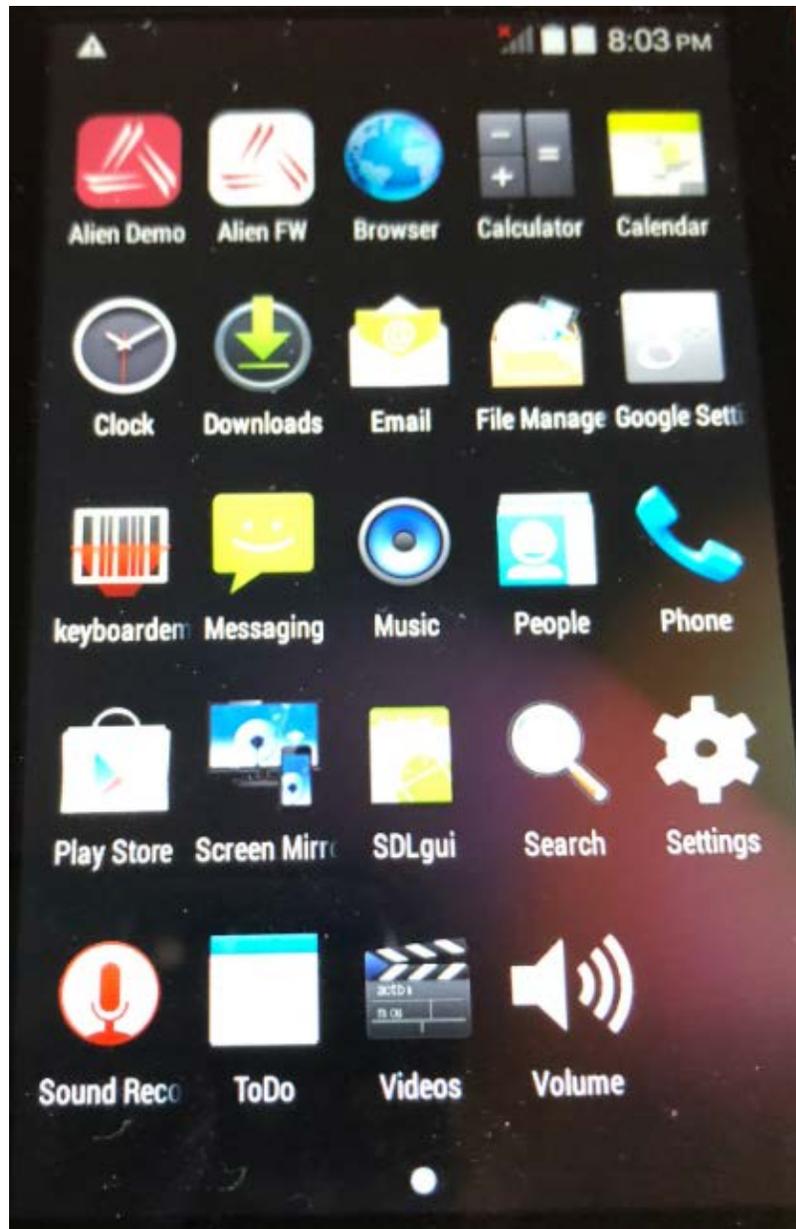

Once installed, click on the “Alien FW” icon to launch the installer:

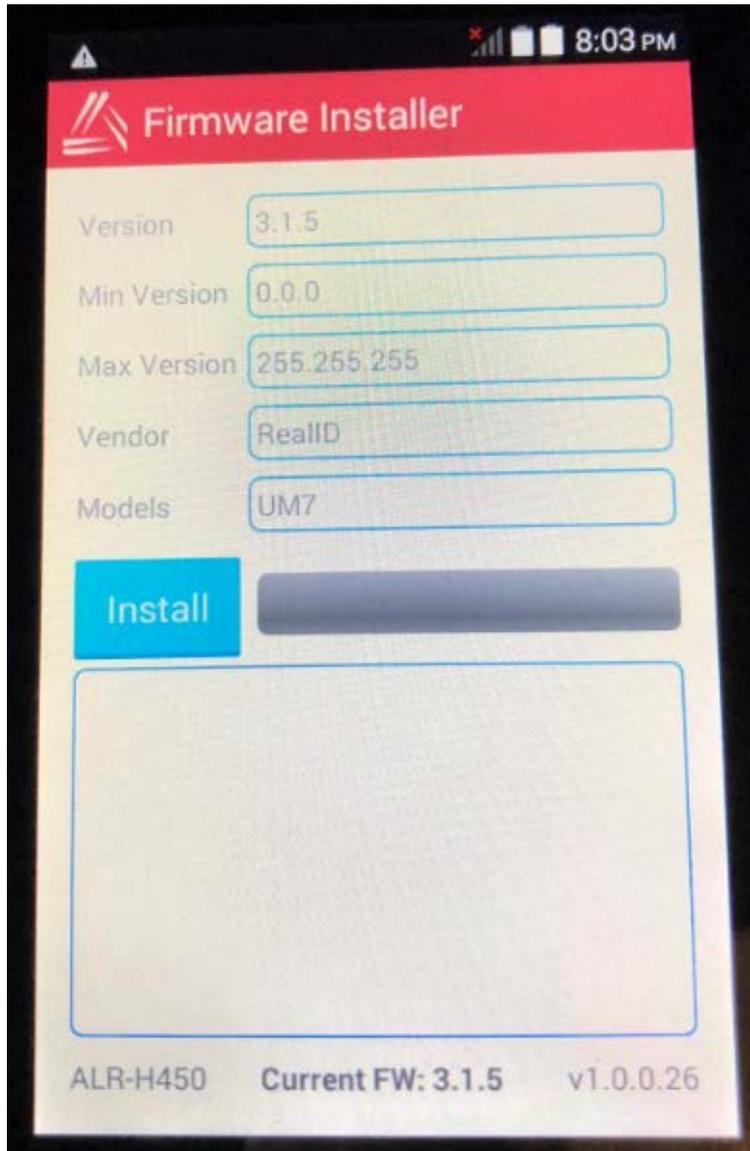

Click “Install” to begin installation which takes only several minutes with no reboot required.



For more Technical Support and more information, please visit AlienTechnology.com and complete the Support Request form: <https://www.alientechnology.com/support/>

|



Alien Technology LLC
845 Embedded Way
San Jose, CA 95138

(408) 782-3900
www.Alientechnology.com